Fisher-Price®

H5985

WARNING

IMPORTANT! KEEP FOR FUTURE REFERENCE.

Consumer Information

WARNING

To prevent serious injury or death:

- **Fall Hazard -** It is dangerous to use this reclined cradle on an elevated surface, since child's movement may cause the product to slide or tip over. Use only on a floor.
- **Suffocation Hazard -** Never use on a soft surface (bed, sofa, cushion) since product can tip over and cause suffocation in soft surfaces.
- Always use the restraint until child is able to climb in and out of the product unassisted.
- Never leave child unattended.
- Use the upright position only when child has developed enough upper body control to sit without leaning forward.
- Never use as a carrier or lift while child is seated. Never use the toy bar as a handle.
- Reclined position not recommended for children who can sit up by themselves (6 months approximately, until 9 kg).

- Please read these instructions before assembly and use of this product.
- Adult assembly is required. Tool needed for assembly: Phillips screwdriver (not included).
- Requires one "D" (LR20) **alkaline** battery (not included) for soother operation.
- Product features and decorations may vary from photographs.

Great Britain: Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303. www.service.mattel.com/uk.

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.

Asia: Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Malaysia: Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd. (993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel: +603-3341 9052.

Parts

CAUTION

This package contains small parts in its unassembled state. Adult assembly is required.

IMPORTANT! Please remove all parts from the package and identify them before assembly. Some parts may be packed in the pad.

Pad

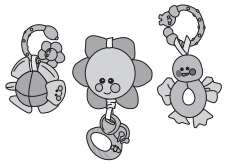

3 Toys

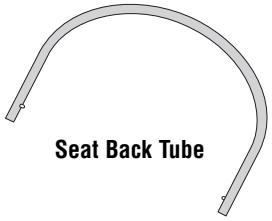

Seat Back Tube

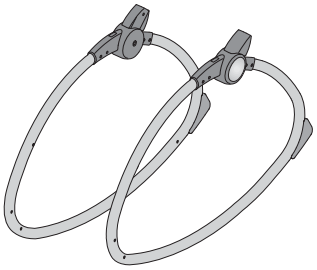

2 Side Rails

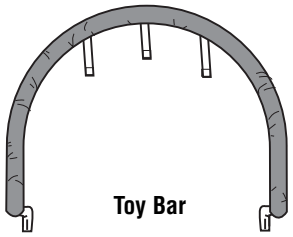

Toy Bar

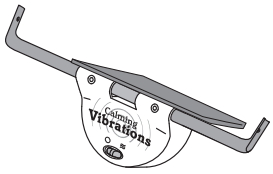

Front Tube

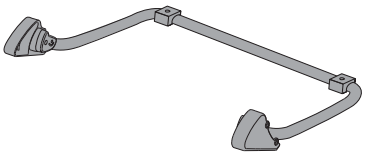

Kickstand

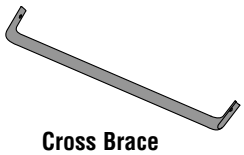

Cross Brace

4 Retainers with Lock Nut



M5 x 30 mm Screw – 8

Shown Actual Size

Note: Tighten or loosen all screws with a Phillips screwdriver. Do not over-tighten the screws.

Fisher Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.
©2009 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.

Assembly

IMPORTANT! Before assembly and each use, inspect this product for damaged hardware, loose joints, missing parts or sharp edges. DO NOT use if any parts are missing or broken. Contact Fisher-Price® for replacement parts and instructions if needed. Never substitute parts.

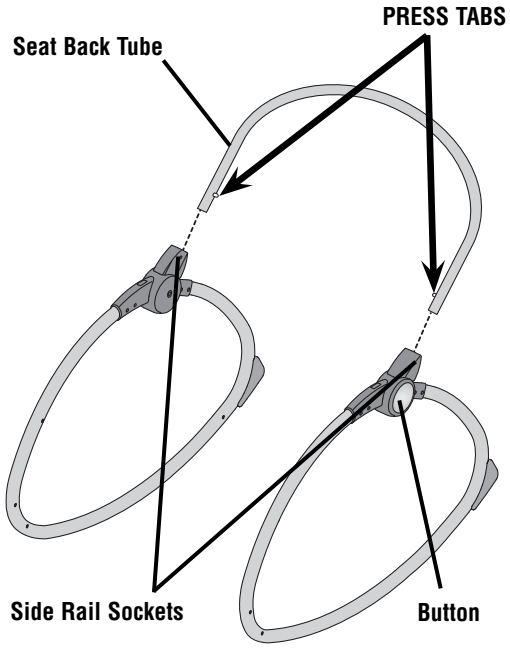

1

- Position each side rail so that the button faces **outward.**
- Insert the seat back tube into the socket in each side rail.
- While pressing the tabs on the ends of the seat back tube, continue to insert the seat back tube into the sockets in each side rail, until the tabs **"snap"** into place. **Make sure you hear a "snap" on each side.**
- Pull the seat back tube up to be sure it is secure in the side rail sockets.

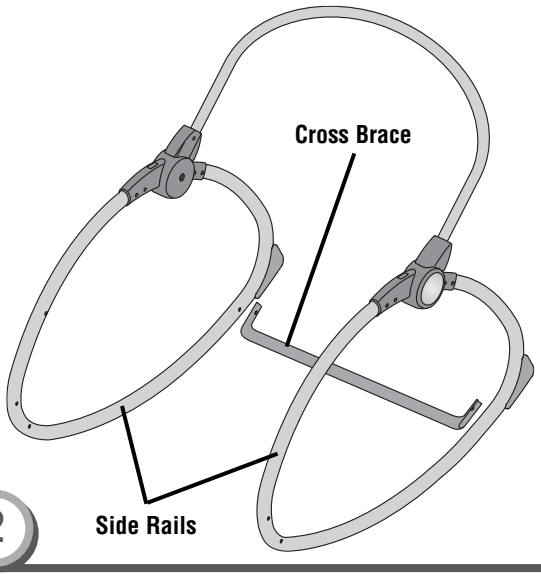

2

- Fit the cross brace between the side rails, as shown.

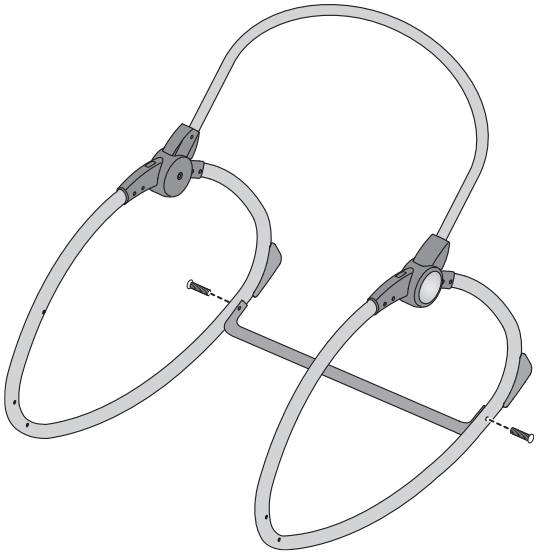

3

- Insert a screw through each side rail and into the ends of the cross brace.

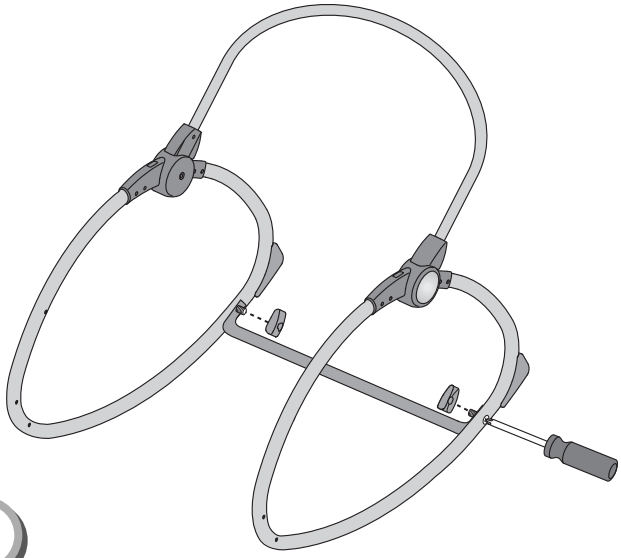

4

- Fit a retainer with lock nut onto the end of the screw and to the inside of a side rail. Tighten the screw.

Hint: *A lock nut has been factory assembled to the retainer. During shipment, the lock nut may have fallen out of the retainer. If it has, please fit it into the hexagonal hole in the retainer so that the rounded side of the lock nut faces out.*

- Repeat this procedure to fasten the screw in the other end of the cross brace and side rail, using the remaining retainer with lock nut.

Assembly

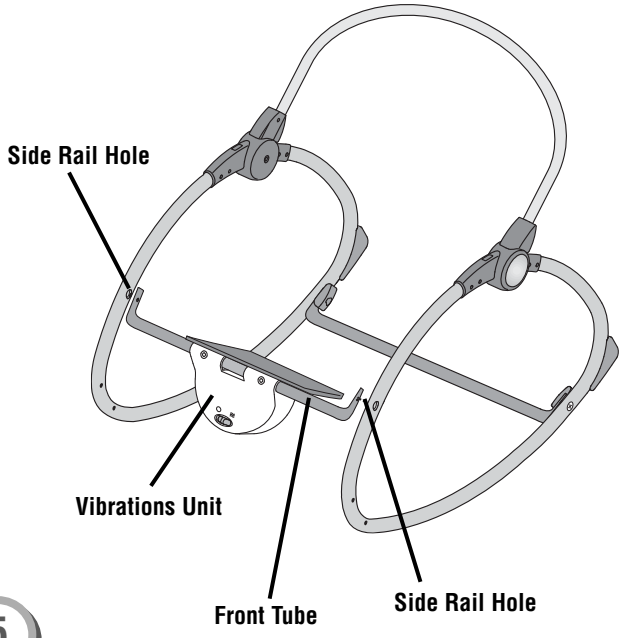

5

- Locate the hole in each side rail.
- With the vibrations unit facing forward, fit the front tube to the side rails, as shown. Hold the front tube in place and proceed to step 6.

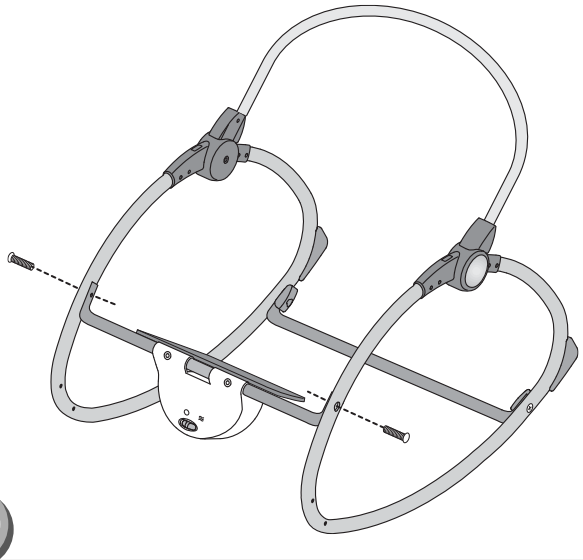

6

- Insert a M5 x 30 mm screw through the outside of each side rail and into the ends of the front tube.

IMPORTANT! Please follow the next assembly (step 7) carefully to completely secure the front tube to the side rails.

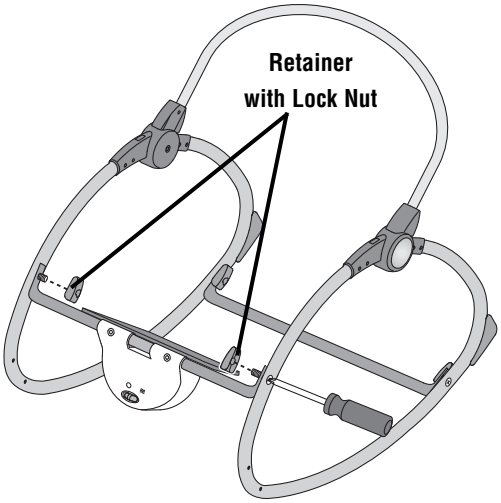

7

- Fit a retainer with lock nut onto the end of the screw and to the inside of a side rail. Tighten the screw.

Hint: *A lock nut has been factory assembled to the retainer. During shipment, the lock nut may have fallen out of the retainer. If it has, please fit it into the hexagonal hole in the retainer so that the rounded side of the lock nut faces out.*

- Repeat this procedure to fasten the screw in the other end of the front tube and side rail, using the remaining retainer with lock nut.

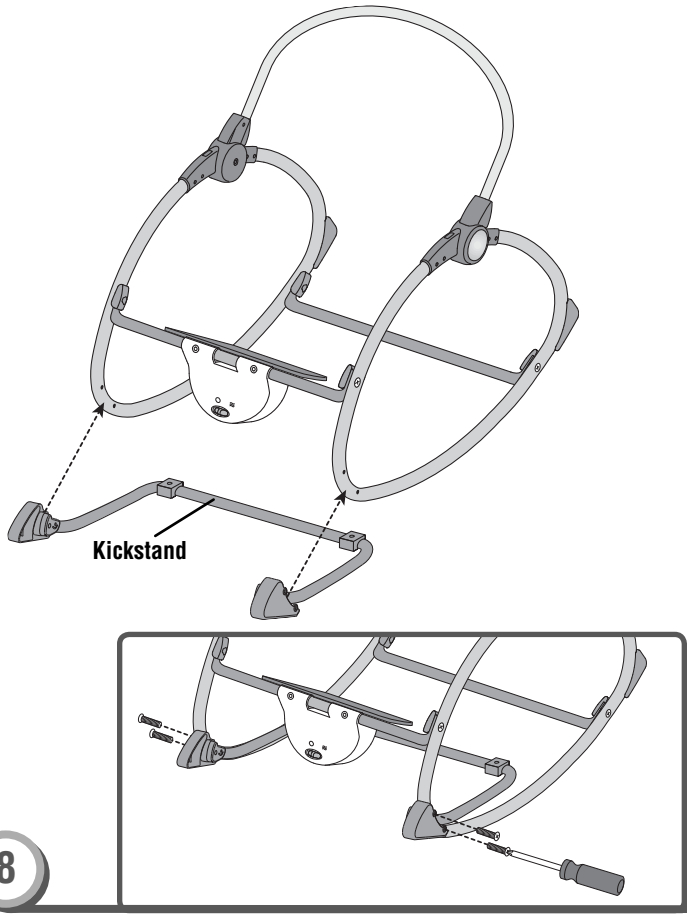

8

- Fit the kickstand onto the assembly, as shown.
- Insert two screws into the holes on each side rail and tighten.

Assembly

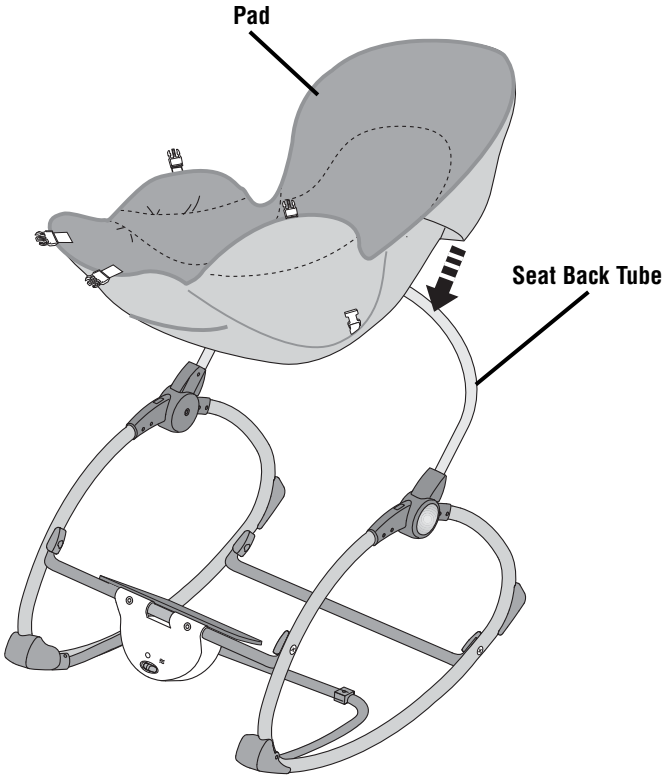

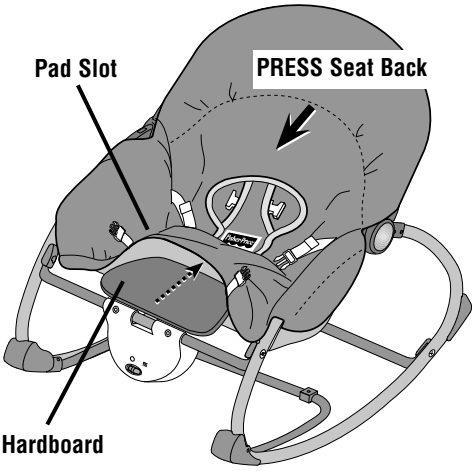

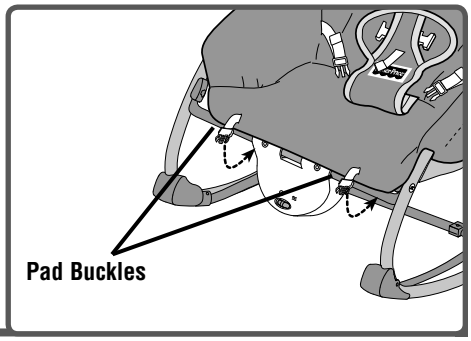

10

- Turn the hardboard over and insert it into the slot in the front edge of the pad.
- Fasten the pad buckles on the front edge of the pad and underneath the seat. **Make sure you hear a "snap" on both sides.**
- Press the fasteners together in the seat back portion of the pad.

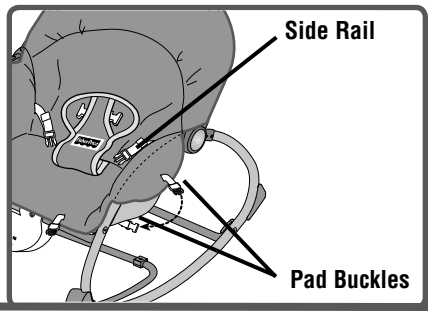

9

- Fit the upper pocket on the pad onto the seat back tube.
- Fasten the pad buckles around each side rail.

Battery Installation

Hint: *We recommend using* ***alkaline*** *batteries for longer battery life.*

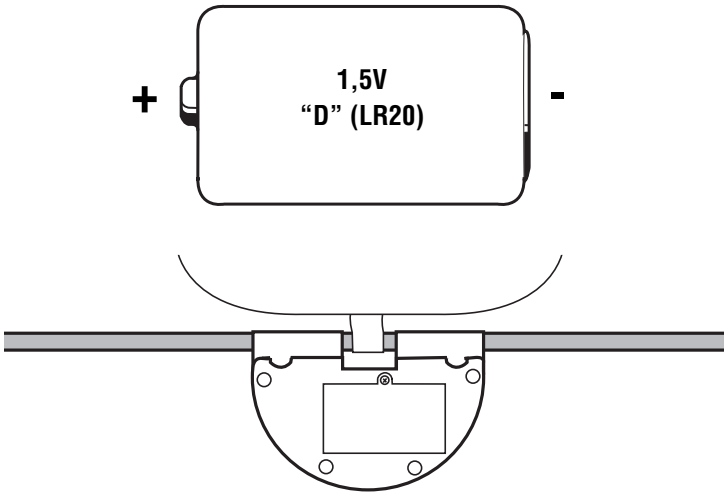

- Locate the battery compartment on the bottom of the vibrations unit.
- Loosen the screw in the battery compartment door. Lift to remove the battery compartment door.
- Insert one "D" (LR20) **alkaline** battery.
- Replace the battery compartment door and tighten the screw.
- If this product begins to operate erratically, you may need to reset the electronics. Slide the power switch off and then back on.

IMPORTANT! Low battery power causes this product to operate erratically: no vibrations and the product may not turn off. Remove and discard the battery and replace with a new "D" (LR20) **alkaline** battery.

- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product.

To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removeable, rechargeable batteries are used, they are only to be charged under adult supervision.

Setup and Use

WARNING

To prevent serious injury or death:

- **Fall Hazard -** It is dangerous to use this reclined cradle on an elevated surface, since child's movement may cause the product to slide or tip over. Use only on a floor.
- **Suffocation Hazard -** Never use on a soft surface (bed, sofa, cushion) since product can tip over and cause suffocation in soft surfaces.
- Always use the restraint until child is able to climb in and out of the product unassisted.
- Never leave child unattended.
- Use the upright position only when child has developed enough upper body control to sit without leaning forward.
- Never use as a carrier or lift while child is seated. Never use the toy bar as a handle.
- Reclined position not recommended for children who can sit up by themselves (6 months approximately, until 9 kg).

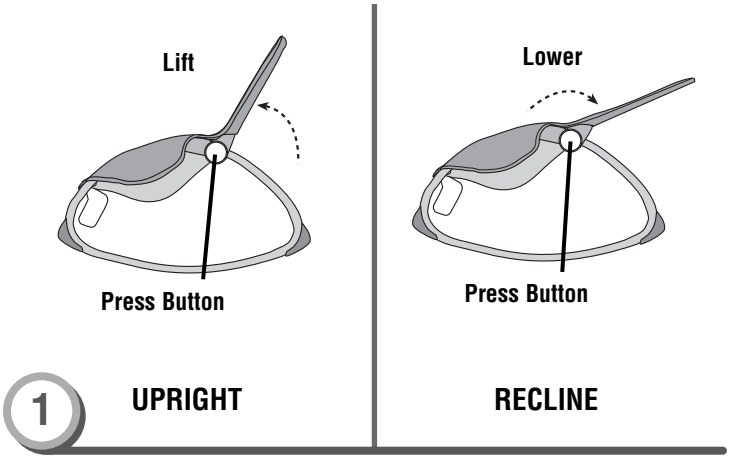

Seat Position

Upright: While pressing the button on each side rail, lift the seat back.

Recline: While pressing the button on each side rail, lower the seat back.

Setup and Use

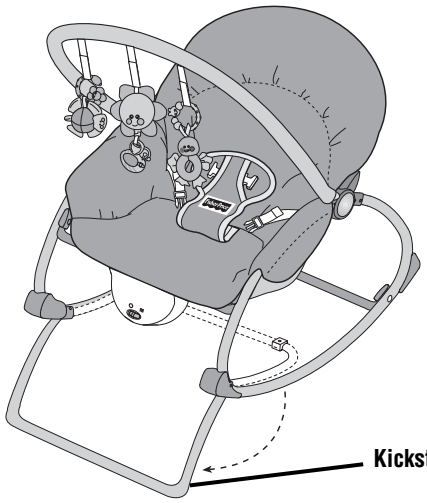

2

- Rotate the kickstand out.
- Push down on the seat bottom to be sure the kickstand is in position.

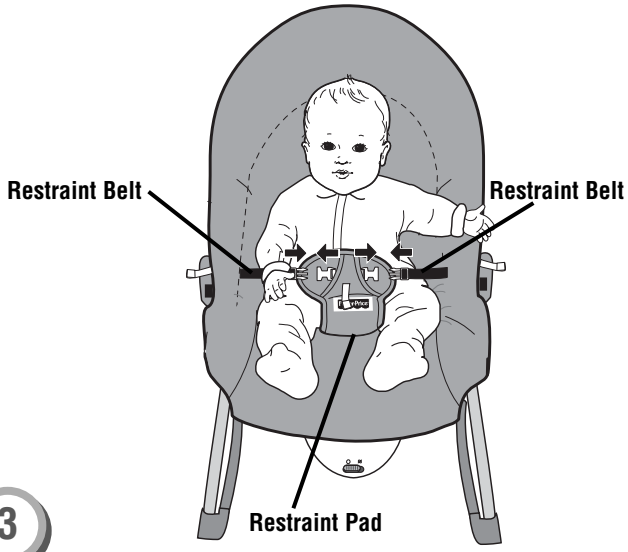

3

- Place your child in the seat. Position the restraint pad between your child's legs.
- Fasten the restraint belts to each side of the restraint pad. **Make sure you hear a "click" on both sides.**
- Check to be sure the restraint system is securely attached by pulling it away from your child. The restraint system should remain attached.

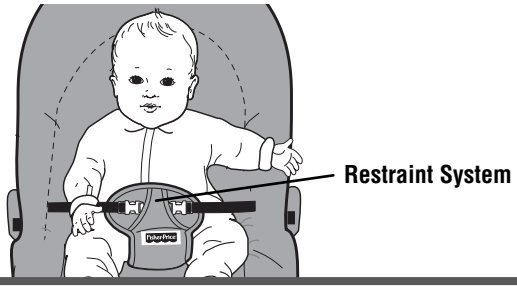

4

- Tighten each waist belt so that the restraint system is snug against your child. Please refer to the next section for instructions to tighten the waist belts.

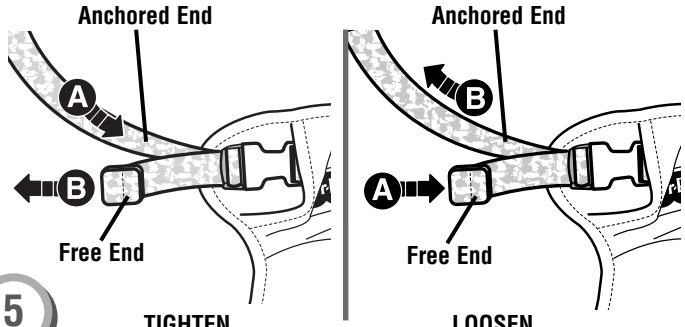

5

To tighten the belts:

- Feed the anchored end of the restraint belt up through the buckle to form a loop Ⓐ. Pull the free end of the restraint belt Ⓑ.

To loosen the belts:

- Feed the free end of the restraint belt up through the buckle to form a loop Ⓐ. Enlarge the loop by pulling on the end of the loop toward the buckle. Pull the anchored end of the restraint belt to shorten the free end of the restraint belt Ⓑ.

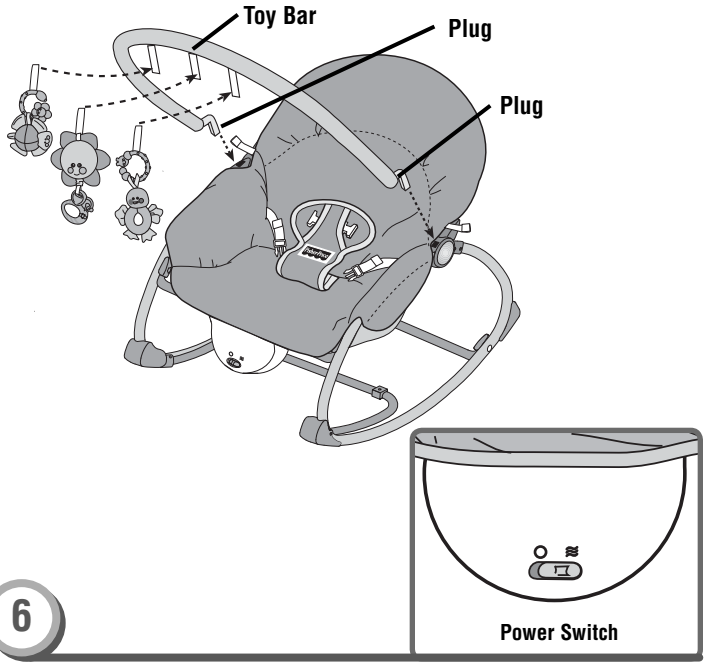

6

- Fit the plugs on each end of the toy bar into the sockets in each side rail.
- Attach the toy straps to the toy bar straps, or attach the toy straps to any of the straps on the pad.
- Make sure your child is properly secured in the seat.
- Slide the power switch to the ≋ on position for calming vibrations. Slide the power switch to the O off position to turn vibrations off.

Storage

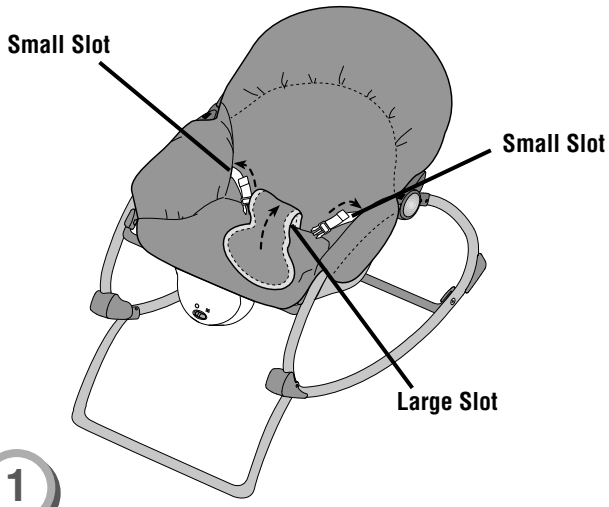

1

- Insert the restraint belts back through the small slots in the pad.
- Insert the restraint pad down through the large slot in the pad.

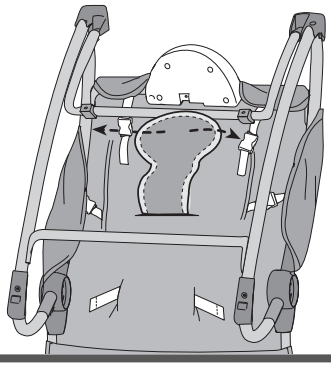

2

- Turn the rocker face down.
- Tuck the ends of the restraint pad underneath the buckles, as shown.

Care

- The pad is machine washable. Wash the pad separately in cold water on the gentle cycle. Do not use bleach. Tumble dry separately on low heat and remove promptly.
- The frame, toy bar and toys may be wiped clean using a mild cleaning solution and a damp cloth. Do not use bleach. Do not use harsh or abrasive cleaners. Rinse clean with water to remove residue. Do not immerse the frame, toy bar and toys.

To remove the pad:

- Unfasten the buckles around each side rail. Turn the seat face down on a flat surface. Unfasten the buckles on the pad.
- Turn the seat upright. Remove the hardboard from the slot in the front edge of the pad.
- Pull the front and back of the seat back area of the pad apart. Lift the pad off the seat.

To replace the pad, refer to Assembly steps 9 and 10.